

# INVERTER

## FR-D700

# INSTALLATION GUIDELINE

## FR-D740-012 to 160-EC

Thank you for choosing this Mitsubishi Inverter.

Please read through this Instruction Manual and the enclosed CD ROM to operate this inverter correctly


- The enclosed CD ROM contains the Installation Guideline in additional languages.
- Die CD-ROM enthält die deutsche Installationsbeschreibung.
- Il CD-ROM incluso contiene la guida di riferimento dell'installazione in lingua italiana.
- Le CD-ROM ci-joint contient cette documentation en français.
- El CD-ROM incluido contiene la pauta de la instalación en lengua española.
- Приложенный CD-ROM содержит инструкцию по инсталляции на дополнительных языках.

Do not use this product until you have a full knowledge of the equipment, the safety information and the instructions.

Please forward this manual and the CD ROM to the end user.

### CONTENTS

|            |   |           |
|------------|---|-----------|
| <b>[1]</b> | <b>INSTALLATION OF THE INVERTER AND INSTRUCTIONS .....</b>  | <b>1</b>  |
| <b>[2]</b> | <b>OUTLINE DIMENSION DRAWING .....</b>                      | <b>3</b>  |
| <b>[3]</b> | <b>WIRING .....</b>   | <b>4</b>  |
| <b>[4]</b> | <b>PRECAUTIONS FOR USE OF THE INVERTER .....</b>            | <b>10</b> |
| <b>[5]</b> | <b>FAILSAFE OF THE SYSTEM WHICH USES THE INVERTER .....</b> | <b>12</b> |
| <b>[6]</b> | <b>PARAMETER .....</b>                                      | <b>13</b> |
| <b>[7]</b> | <b>TROUBLESHOOTING .....</b>                                | <b>17</b> |

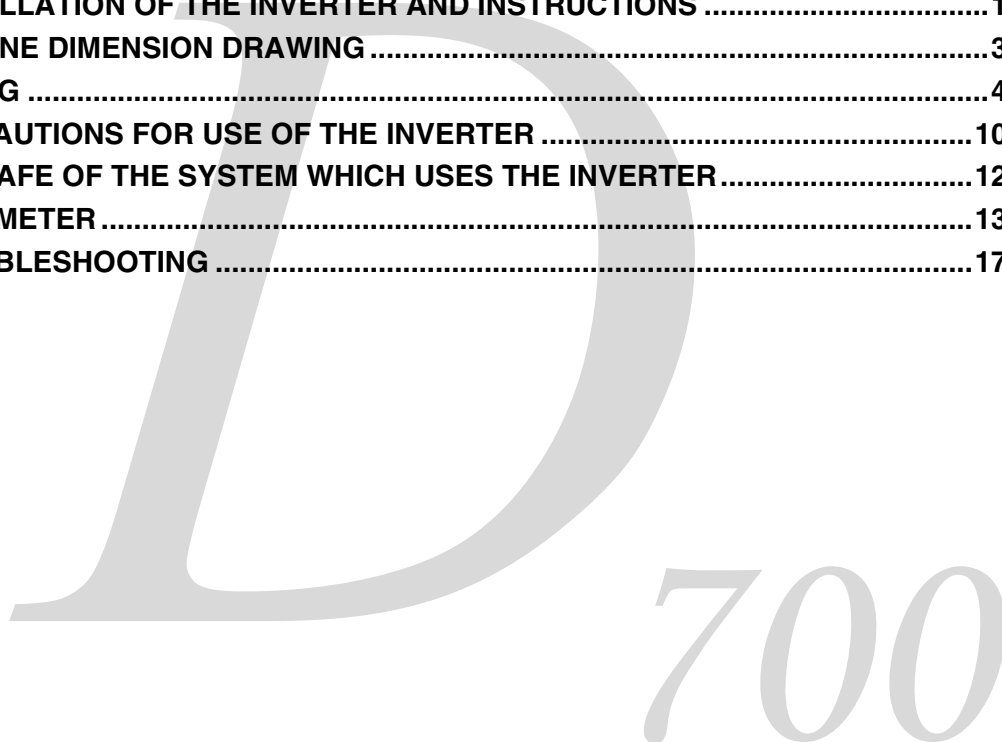



### This section is specifically about safety matters


Do not attempt to install, operate, maintain or inspect the inverter until you have read through this Installation Guideline and appended documents carefully and can use the equipment correctly. Do not use the inverter until you have a full knowledge of the equipment, safety information and instructions. In this Installation Guideline, the safety instruction levels are classified into "WARNING" and "CAUTION".

#### **WARNING**

Assumes that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

#### **CAUTION**

Assumes that incorrect handling may cause hazardous conditions, resulting in medium or slight injury, or may cause physical damage only.

Note that even the  **CAUTION** level may lead to a serious consequence according to conditions. Please follow strictly the instructions of both levels because they are important to personnel safety.

### Electric Shock Prevention

#### **WARNING**

- While power is on or when the inverter is running, do not open the front cover or wiring cover. Otherwise you may get an electric shock.
- Do not run the inverter with the front cover removed. Otherwise, you may access the exposed high-voltage terminals or the charging part of the circuitry and get an electric shock.
- Even if power is off, do not remove the front cover except for wiring or periodic inspection. You may access the charged inverter circuits and get an electric shock.
- Before starting wiring or inspection, check to make sure that the operation panel indicator is off, wait for at least 10 minutes after the power supply has been switched off, and check that there are no residual voltage using a tester or the like. The capacitor is charged with high voltage for some time after power off and it is dangerous.
- This inverter must be earthed (grounded). Earthing (Grounding) must conform to the requirements of national and local safety regulations and electrical codes. (NEC section 250, IEC 536 class 1 and other applicable standards)
- Any person who is involved in the wiring or inspection of this equipment should be fully competent to do the work.
- Always install the inverter before wiring. Otherwise, you may get an electric shock or be injured.
- Perform setting dial and key operations with dry hands to prevent an electric shock. Otherwise you may get an electric shock.
- Do not subject the cables to scratches, excessive stress, heavy loads or pinching. Otherwise you may get an electric shock.
- Do not replace the cooling fan while power is on. It is dangerous to replace the cooling fan while power is on.
- Do not touch the printed circuit board with wet hands. You may get an electric shock.
- When measuring the main circuit capacitor capacity, the DC voltage is applied to the motor for 1s at powering off. Never touch the motor terminal, etc. right after powering off to prevent an electric shock.

### Fire Prevention

#### **CAUTION**

- Mount the inverter to incombustible material. Mounting it to or near combustible material can cause a fire.
- If the inverter has become faulty, switch off the inverter power. A continuous flow of large current could cause a fire.
- When using a brake resistor, make up a sequence that will turn off power when an alarm signal is output. Otherwise, the brake resistor may excessively overheat due to damage of the brake transistor and such, causing a fire.
- Do not connect a resistor directly to the DC terminals P, N. This could cause a fire and destroy the inverter. The surface temperature of braking resistors can far exceed 100°C for brief periods. Make sure that there is adequate protection against accidental contact and a safe distance is maintained to other units and system parts.

### Injury Prevention

#### **CAUTION**

- Apply only the voltage specified in the instruction manual to each terminal. Otherwise, burst, damage, etc. may occur.
- Ensure that the cables are connected to the correct terminals. Otherwise, burst, damage, etc. may occur.
- Always make sure that polarity is correct to prevent damage, etc. Otherwise, burst, damage, etc. may occur.
- While power is on or for some time after power-off, do not touch the inverter as it is hot and you may get burnt.

### Additional Instructions

Also note the following points to prevent an accidental failure, injury, electric shock, etc.

### Transportation and installation

#### **CAUTION**

- Transport the product using the correct method that corresponds to the weight. Failure to observe this could lead to injuries.
- Do not stack the inverter boxes higher than the number recommended.
- Ensure that installation position and material can withstand the weight of the inverter. Install according to the information in the instruction manual.
- Do not install or operate the inverter if it is damaged or has parts missing. This can result in breakdowns.
- When carrying the inverter, do not hold it by the front cover or setting dial; it may fall off or fail.
- Do not stand or rest heavy objects on the product.
- Check the inverter mounting orientation is correct.
- Prevent other conductive bodies such as screws and metal fragments or other flammable substance such as oil from entering the inverter.
- As the inverter is a precision instrument, do not drop or subject it to impact.
- Use the inverter under the following environmental conditions. Otherwise, the inverter may be damaged.

|                     |                     |   |
|---------------------|---------------------|---|
| Operating condition | Ambient temperature | -10°C to +50°C (non-freezing)   |
|                     | Ambient humidity    | 90% RH or less (non-condensing)   |
|                     | Storage temperature | -20°C to +65°C <sup>①</sup>   |
|                     | Atmosphere          | Indoors (free from corrosive gas, flammable gas, oil mist, dust and dirt)   |
|                     | Altitude            | Maximum 1000m above sea level for standard operation. After that derate by 3% for every extra 500m up to 2500m (91%). |
|                     | Vibration           | 5.9m/s <sup>2</sup> or less   |

<sup>①</sup> Temperature applicable for a short time, e.g. in transit.

## Wiring

### CAUTION

- Do not install assemblies or components (e. g. power factor correction capacitors) on the inverter output side, which are not approved from Mitsubishi.
- The direction of rotation of the motor corresponds to the direction of rotation commands (STF/STR) only if the phase sequence (U, V, W) is maintained.


## Test operation and adjustment

### CAUTION

- Before starting operation, confirm and adjust the parameters. A failure to do so may cause some machines to make unexpected motions.

## Operation

### WARNING

- When you have chosen the retry function, stay away from the equipment as it will restart suddenly after an alarm stop.
- The  key is valid only when the appropriate function setting has been made. Prepare an emergency stop switch separately to make an emergency stop (power off, mechanical brake operation for emergency stop, etc).
- Make sure that the start signal is off before resetting the inverter alarm. A failure to do so may restart the motor suddenly.
- The inverter can be started and stopped via the serial port communications link or the field bus. However, please note that depending on the settings of the communications parameters it may not be possible to stop the system via these connections if there is an error in the communications system or the data line. In configurations like this it is thus essential to install additional safety hardware that makes it possible to stop the system in an emergency (e.g. controller inhibit via control signal, external motor contactor etc). Clear and unambiguous warnings about this must be posted on site for the operating and service staff.
- The load used should be a three-phase induction motor only. Connection of any other electrical equipment to the inverter output may damage the inverter as well as the equipment.
- Do not modify the equipment.
- Do not perform parts removal which is not instructed in this manual. Doing so may lead to fault or damage of the inverter.

### CAUTION

- The electronic thermal relay function does not guarantee protection of the motor from overheating.
- Do not use a magnetic contactor on the inverter input for frequent starting/stopping of the inverter.
- Use a noise filter to reduce the effect of electromagnetic interference and follow the accepted EMC procedures for proper installation of frequency inverters. Otherwise nearby electronic equipment may be affected.
- Take appropriate measures regarding harmonics. Otherwise this can endanger compensation systems or overload generators.
- When a 400V class motor is inverter-driven, please use an insulation-enhanced motor or measures taken to suppress surge voltages. Surge voltages attributable to the wiring constants may occur at the motor terminals, deteriorating the insulation of the motor.
- When parameter clear or all clear is performed, set again the required parameters before starting operations. Each parameter returns to the initial value.
- The inverter can be easily set for high-speed operation. Before changing its setting, fully examine the performances of the motor and machine.
- The DC braking function of the frequency inverter is not designed to continuously hold a load. Use an electro-mechanical holding brake on the motor for this purpose.
- Before running an inverter which had been stored for a long period, always perform inspection and test operation.
- For prevention of damage due to static electricity, touch nearby metal before touching this product to eliminate static electricity from your body.

## Emergency stop

### CAUTION

- Provide a safety backup such as an emergency brake which will prevent the machine and equipment from hazardous conditions if the inverter fails.
- When the breaker on the inverter primary side trips, check for the wiring fault (short circuit), damage to internal parts of the inverter, etc. Identify the cause of the trip, then remove the cause and power on the breaker.
- When the protective function is activated (i. e. the frequency inverter switches off with an error message), take the corresponding corrective action as described in the inverter manual, then reset the inverter, and resume operation.

## Maintenance, inspection and parts replacement

### CAUTION

- Do not carry out a megger (insulation resistance) test on the control circuit of the inverter.

## Disposing of the inverter

### CAUTION

- Treat as industrial waste.

## General instructions

Many of the diagrams and drawings in instruction manuals show the inverter without a cover, or partially open. Never run the inverter in this status. Always replace the cover and follow instruction manuals when operating the inverter.

# 1 INSTALLATION OF THE INVERTER AND INSTRUCTIONS

Unpack the inverter and check the capacity plate on the front cover and the rating plate on the inverter side face to ensure that the product agrees with your order and the inverter is intact.

## 1.1 Inverter Type

FR - D740 - 036 - EC

| Symbol | Voltage Class             | Symbol           | Type number     |
|--------|---------------------------|------------------|-----------------|
| D740   | Three-phase<br>400V class | 012<br>to<br>160 | 3-digit display |

Capacity plate example

### Capacity plate

FR-D740-036-EC ← Inverter type  
SERIAL: XXXXXX ← Serial number

Rating plate example

### Rating plate


MITSUBISHI INVERTER  
Inverter type → MODEL FR-D740-036-EC  
Input rating → INPUT : XXXXX  
Output rating → OUTPUT : XXXXX  
Serial number → SERIAL : \_\_\_\_\_

PASSED

## 1.2 Installation of the inverter


Enclosure surface mounting

Remove the front cover and wiring cover to fix the inverter to the surface.

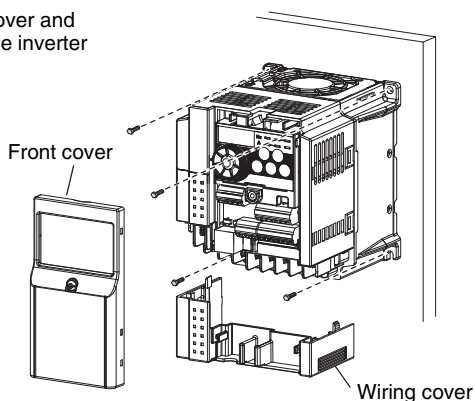


### Note

- When encasing multiple inverters, install them in parallel and leave clearance as a cooling measure.
- Install the inverter vertically.

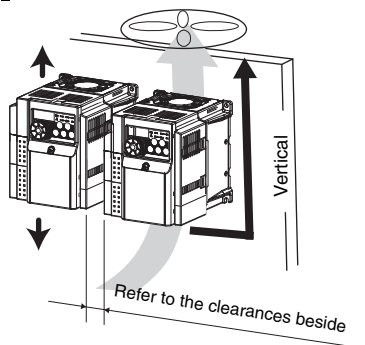


Ambient temperature and humidity

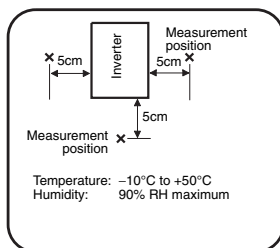

Temperature: -10°C to +50°C  
Humidity: 90% RH maximum


Leave enough clearances and take cooling measures.

Clearances (side)

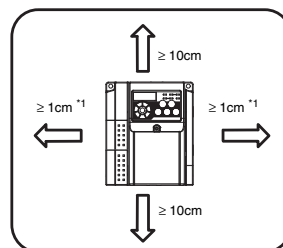

\*1 When using the inverters at the ambient temperature of 40°C or less, the inverters can be installed closely attached (0cm clearance). When ambient temperature exceeds 40°C, clearances between the inverter should be 1cm or more (5cm or more for the FR-D740-120 or more).

Clearances (front)

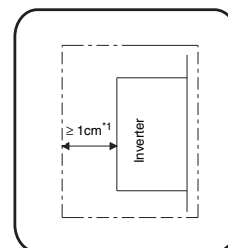

\*1 5cm or more for the FR-D740-120 or more



## 1.3 General Precaution

The bus capacitor discharge time is 10 minutes. Before starting wiring or inspection, switch power off, wait for more than 10 minutes, and check for residual voltage between terminal P/+ and N/- with a meter etc., to avoid a hazard of electrical shock.

## 1.4 Environment


Before installation, check that the environment meets following specifications.

|                            |   |
|----------------------------|---|
| <b>Ambient temperature</b> | -10°C to +50°C (non-freezing)   |
| <b>Ambient humidity</b>    | 90% RH or less (non-condensing)   |
| <b>Atmosphere</b>          | Free from corrosive and explosive gases, free from dust and dirt  |
| <b>Maximum altitude</b>    | Maximum 1000m above sea level for standard operation. After that derate by 3% for every extra 500m up to 2500m (91%). |
| <b>Vibration</b>           | 5.9m/s <sup>2</sup> or less   |

### CAUTION

- Install the inverter on a strong surface securely and vertically with bolts.
- Leave enough clearances and take cooling measures.
- Avoid places where the inverter is subjected to direct sunlight, high temperature and high humidity.
- Install the inverter on a non-combustible surface.

# 2 OUTLINE DIMENSION DRAWING

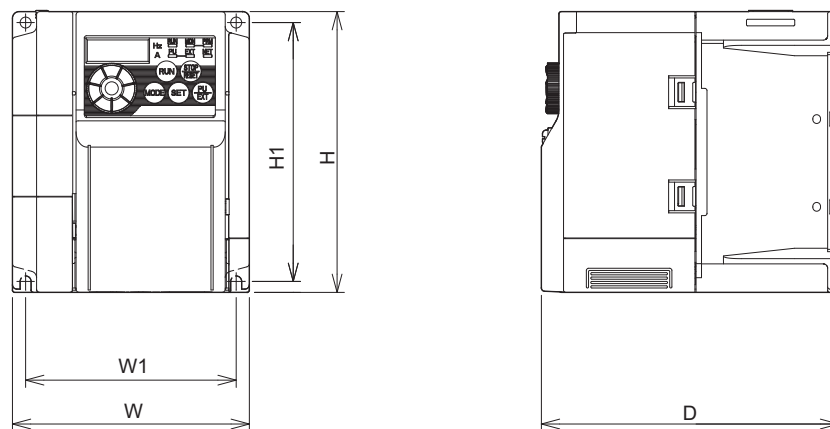


(Unit: mm)

| Inverter Type | W   | W1  | H   | H1  | D     |
|---------------|-----|-----|-----|-----|-------|
| FR-D740-012   | 108 | 96  | 128 | 118 | 129.5 |
| FR-D740-022   |     |     |     |     | 135.5 |
| FR-D740-036   |     |     |     |     | 155.5 |
| FR-D740-050   |     |     |     |     | 165.5 |
| FR-D740-080   | 220 | 208 | 150 | 138 | 155   |
| FR-D740-120   |     |     |     |     |       |
| FR-D740-160   |     |     |     |     |       |

# 3 WIRING

## 3.1 Terminal connection diagram

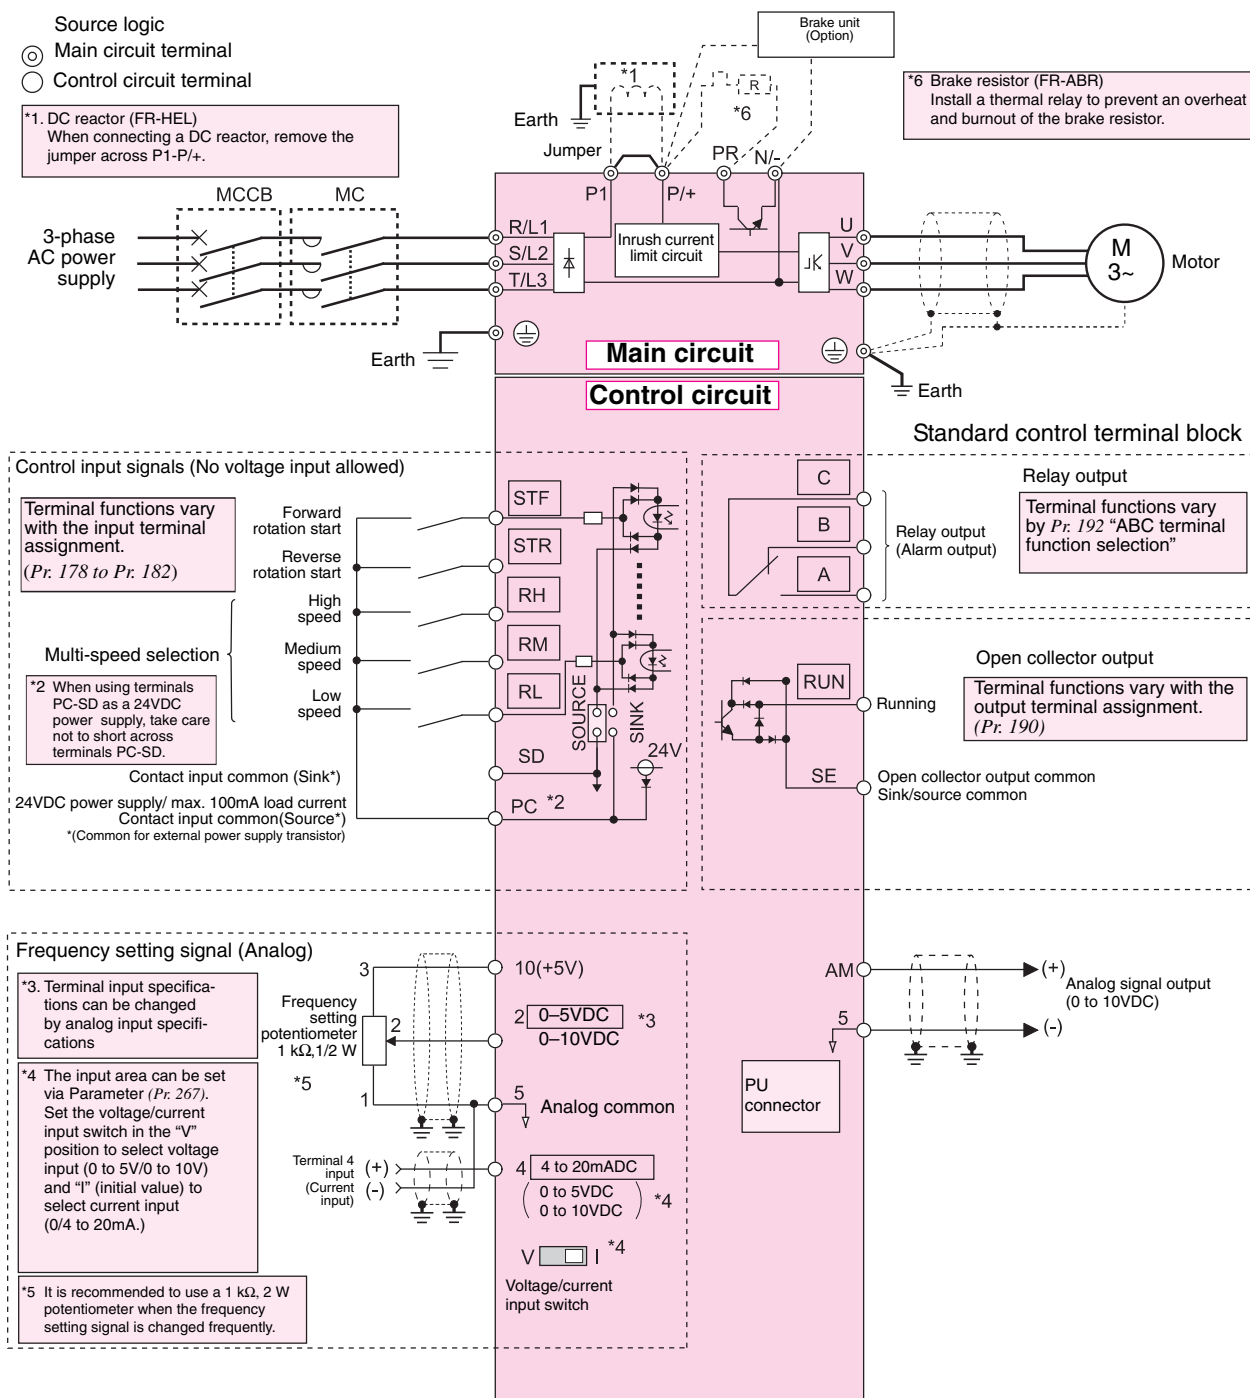


### CAUTION

- To prevent a malfunction due to noise, keep the signal cables more than 10cm away from the power cables.
- After wiring, wire offcuts must not be left in the inverter. Wire offcuts can cause an alarm, failure or malfunction. Always keep the inverter clean. When drilling mounting holes in a control box etc., take care not to allow chips and other foreign matter to enter the inverter.
- Set the voltage/current input switch in the correct position. An incorrect setting may cause a fault, failure or malfunction.



## 3.2 Main circuit terminal specifications

### 3.2.1 Terminal arrangement of the main circuit terminal, power supply and the motor wiring

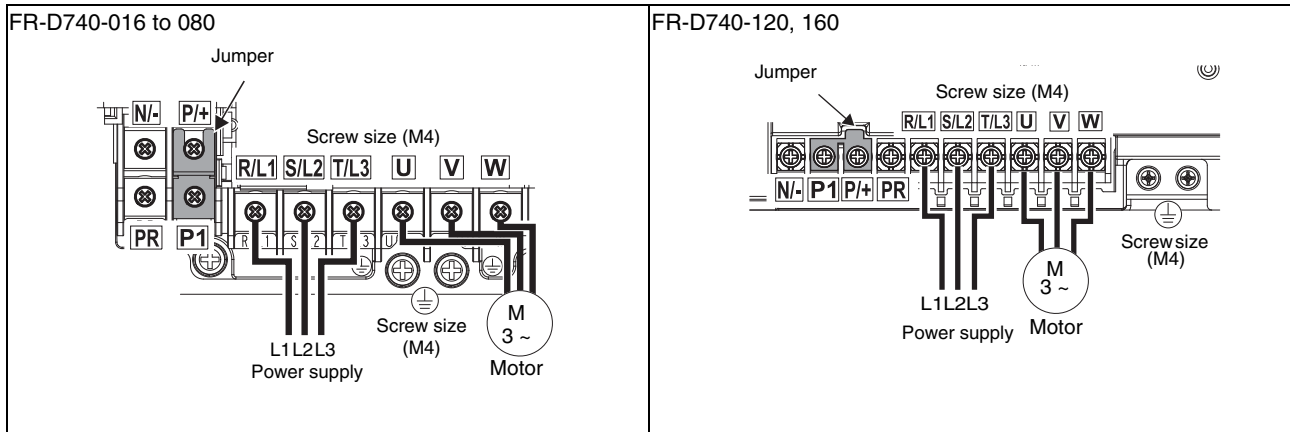

#### CAUTION

- The power supply cables must be connected to R/L1, S/L2, T/L3. Never connect the power cable to the U, V, W of the inverter. Doing so will damaged the inverter. (Phase sequence needs not to be matched.)
- Connect the motor to U, V, W. At this time turning on the forward rotation switch (signal) rotates the motor in the clockwise direction when viewed on the motor shaft.



### 3.3 Cables and wiring length

#### 3.3.1 Cable size

Select the recommended cable size to ensure that a voltage drop will be 2% max.

If the wiring distance is long between the inverter and motor, a main circuit cable voltage drop will cause the motor torque to decrease especially at the output of a low frequency.

The following table indicates a selection example for the wiring length of 20m.

#### 400V class (when input power supply is 440V)

| Applicable Inverter Type | Terminal Screw Size <sup>*4</sup> | Tightening Torque [Nm] | Crimping Terminal |         |
|--------------------------|-----------------------------------|------------------------|-------------------|---------|
|                          |                                   |                        | R/L1, S/L2, T/L3  | U, V, W |
| FR-D740-012 to 080       | M4                                | 1.5                    | 2-4               | 2-4     |
| FR-D740-120              | M4                                | 1.5                    | 2-4               | 2-4     |
| FR-D740-160              | M4                                | 1.5                    | 5.5-4             | 5.5-4   |

| Applicable Inverter Type | Cable Sizes                                |         |                   |                   |         |  |         |                   |
|--------------------------|--|---------|-------------------|-------------------|---------|--|---------|-------------------|
|                          | HIV, etc. [mm <sup>2</sup> ] <sup>*1</sup> |         |                   | AWG <sup>*2</sup> |         | PVC, etc. [mm <sup>2</sup> ] <sup>*3</sup> |         |                   |
|                          | R/L1, S/L2, T/L3                           | U, V, W | Earth Cable Gauge | R/L1, S/L2, T/L3  | U, V, W | R/L1, S/L2, T/L3                           | U, V, W | Earth Cable Gauge |
| FR-D740-012 to 080       | 2  | 2       | 2                 | 14                | 14      | 2.5  | 2.5     | 2.5               |
| FR-D740-120              | 3.5  | 2       | 3.5               | 12                | 14      | 4  | 2.5     | 4                 |
| FR-D740-160              | 3.5  | 3.5     | 3.5               | 12                | 12      | 4  | 4       | 4                 |

<sup>\*1</sup> The recommended cable size is that of the HIV cable (600V class 2 vinyl-insulated cable) with continuous maximum permissible temperature of 75°C. Assumes that the ambient temperature is 50°C or less and the wiring distance is 20m or less.

<sup>\*2</sup> The recommended cable size is that of the THHW cable with continuous maximum permissible temperature of 75°C. Assumes that the ambient temperature is 40°C or less and the wiring distance is 20m or less.  
(Selection example for use mainly in the United States.)

<sup>\*3</sup> The recommended cable size is that of the PVC cable with continuous maximum permissible temperature of 70°C. Assumes that the ambient temperature is 40°C or less and the wiring distance is 20m or less.  
(Selection example for use mainly in Europe.)

<sup>\*4</sup> The terminal screw size indicates the terminal size for R/L1, S/L2, T/L3, U, V, W, PR, P/+, N/–, P1 and a screw for earthing.

#### NOTE

- Tighten the terminal screw to the specified torque. A screw that has been tightened too loosely can cause a short circuit or malfunction. A screw that has been tightened too tightly can cause a short circuit or malfunction due to the unit breakage.
- Use crimping terminals with insulation sleeve to wire the power supply and motor.

The line voltage drop can be calculated by the following expression:

$$\text{line voltage drop [V]} = \frac{\sqrt{3} \times \text{wire resistance [m}\Omega/\text{m}] \times \text{wiring distance [m]} \times \text{current [A]}}{1000}$$

Use a larger diameter cable when the wiring distance is long or when it is desired to decrease the voltage drop (torque reduction) in the low speed range.


### 3.3.2 Maximum permissible motor wiring length

The maximum permissible length of the motor cables depends on the capacity of the inverter and the selected carrier frequency.

The lengths in the following table are for unshielded cables. When shielded cables are used divide the values listed in the table by 2. Note that the values are for the total wiring length – if you connect more than one motor in parallel you must add the lengths of the individual motor cables.

| Setting of Pr. 72 PWM Frequency selection (carrier frequency) | 012  | 022  | 036  | 050  | ≥ 080 |
|---|------|------|------|------|-------|
| 1 (1kHz) or less  | 200m | 200m | 300m | 500m | 500m  |
| 2 to 15 (2kHz to 14.5kHz)                                     | 30m  | 100m | 200m | 300m | 500m  |

Total wiring length (FR-D740-080 or more)

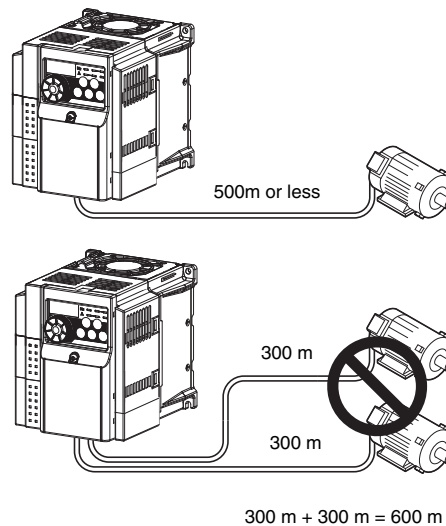

Note that the motor windings in three-phase AC motors are subject to far more stress when operated via frequency inverters than with mains operation. The motor must have been approved by the manufacturer for operation on a frequency inverter.

In the PWM type inverter, a surge voltage attributable to wiring constants is generated at the motor terminals. Especially for a 400V class motor, the surge voltage may deteriorate the insulation. When the 400V class motor is driven by the inverter, consider the following measures:

- Use a "400V class inverter-driven insulation-enhanced motor" and set frequency in *Pr. 72 PWM frequency selection* according to wiring length.

|                   | ≤ 50m     | 50m–100m | ≥ 100m |
|-------------------|-----------|----------|--------|
| Carrier frequency | ≤ 14.5kHz | ≤ 8kHz   | ≤ 2kHz |

- Limiting the voltage rise speed of the frequency inverter output voltage (dU/dT):  
If the motor requires a rise speed of 500V/μs or less you must install a filter in the output of the inverter. Please contact your Mitsubishi dealer for more details.

#### CAUTION


- Especially for long-distance wiring (particularly when employing shielded motor cables), the inverter may be affected by a charging current caused by the stray capacitances of the wiring, leading to a malfunction of the overcurrent protective function or fast response current limit function, or stall prevention function or a malfunction or fault of the equipment connected on the inverter output side. When the fast-response current limit function malfunctions, make the function invalid. When stall prevention function misoperates, increase the stall level. (For *Pr. 22 Stall prevention operation level* and *Pr. 156 Stall prevention operation selection*, refer to the Instruction Manual.)
- For details of *Pr. 72 PWM frequency selection*, refer to the Instruction Manual.
- When using the automatic restart after instantaneous power failure function with wiring length exceeding 100m, select without frequency search (*Pr. 162* = "1, 11"). (Refer to the Instruction Manual).



## 3.4 Control circuit specification

### 3.4.1 Standard control circuit terminal layout

Recommended cable size:  
0.3mm<sup>2</sup> to 0.75mm<sup>2</sup>

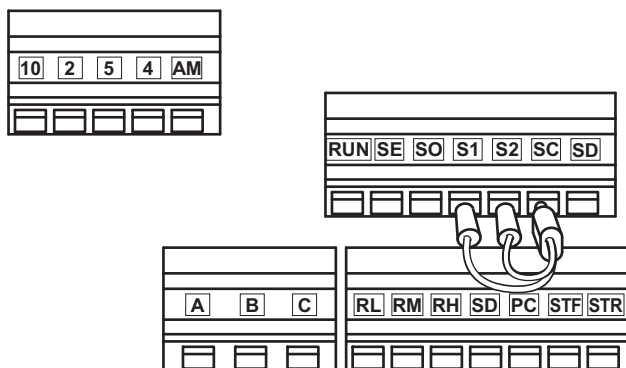


### 3.4.2 Wiring method

#### Wiring

Use a bar terminal and a cable with a sheath stripped off for the control circuit wiring. For a single wire, strip off the sheath of the cable and apply directly. Insert the bar terminal or the single wire into a socket of the terminal.


- Strip off the sheath about the size below. If the length of the sheath peeled is too long, a short circuit may occur among neighboring wires. If the length is too short, wires might come off.

Wire the stripped cable after twisting it to prevent it from becoming loose. In addition, do not solder it.




- Crimp the bar terminal.

Insert wires to a bar terminal, and check that the wires come out for about 0 to 0.5mm from a sleeve.

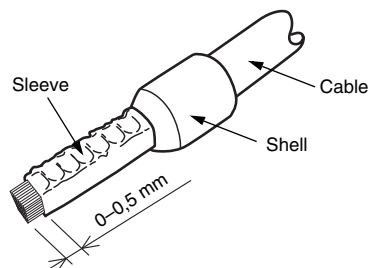

- Check the condition of the bar terminal after crimping. Do not use a bar terminal of which the crimping is inappropriate, or the face is damaged.

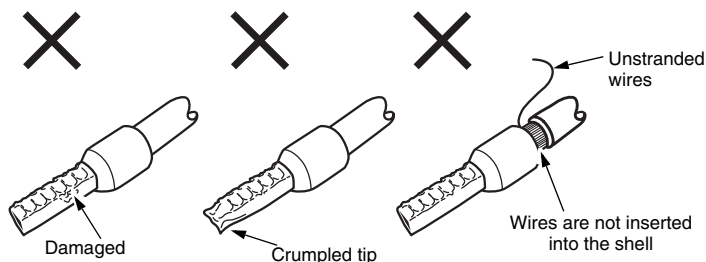


Introduced products on bar terminals:


| Wire Size [mm <sup>2</sup> ] | Bar Terminal Model     |                           | Maker                     |
|------------------------------|------------------------|---------------------------|---------------------------|
|                              | With Insulation Sleeve | Without Insulation Sleeve |                           |
| 0.3-0.5                      | AI 0,5-10WH            | —                         | Phoenix Contact Co., Ltd. |
| 0.5-0.75                     | AI 0,75-10GY           | A 0,75-10                 |                           |

Bar terminal crimping tool: CRIMPFOX ZA3 (Phoenix Contact Co., Ltd.)

- Insert the wire into a socket.

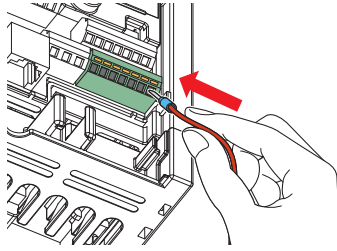

When using a stranded wire without a bar terminal, push a open/close button all the way down with a flathead screw driver, and insert the wire.

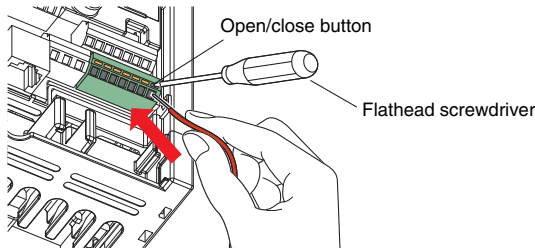


### CAUTION

- When using a stranded wire without a bar terminal, twist enough to avoid short circuit with a nearby terminals or wires.
- Place the flathead screwdriver vertical to the open/close button. In case the blade tip slips, it may cause to damage of inverter or injury.

### Wire removal

- Pull the wire with pushing the open/close button all the way down firmly with a flathead screwdriver.

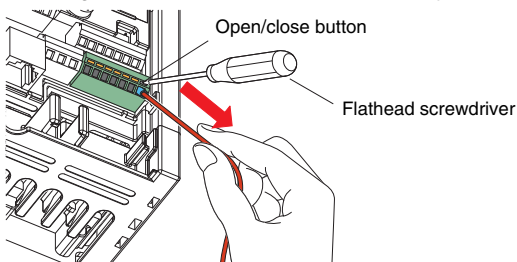


### CAUTION


- Use a small flathead screwdriver (Tip thickness: 0.4mm/tip width: 2.5mm). If a flathead screwdriver with a narrow tip is used, terminal block may be damaged.
- Place the flathead screwdriver vertical to the open/close button. In case the blade tip slips, it may cause to damage of inverter or injury.

## 3.4.3 Wiring instructions

- Terminals PC, 5, and SE are all common terminals (0V) for I/O signals and are isolated from each other. Avoid connecting the terminal PC and 5 and the terminal SE and 5 (ground). Terminal PC is a common terminal for the contact input terminals (STF, STR, RH, RM, RL).
- Use shielded or twisted cables for connection to the control circuit terminals and run them away from the main and power circuits (including the 230V relay sequence circuit).
- Use two or more parallel micro-signal contacts or twin contacts to prevent a contact faults when using contact inputs since the control circuit input signals are micro-currents.

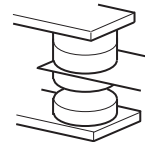

Micro signal contacts

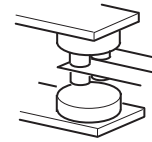

Twin contacts

- Do not apply a voltage to the contact input terminals (e.g. STF) of the control circuit.
- Always apply a voltage to the alarm output terminals (A, B, C) via a relay coil, lamp, etc.
- It is recommended to use the cables of 0.3mm<sup>2</sup> to 0.75mm<sup>2</sup> gauge for connection to the control circuit terminals. If the cable gauge used is 1.25mm<sup>2</sup> or more, the front cover may be lifted when there are many cables running or the cables are run improperly, resulting in a fall off of the operation.
- The wiring length should be 30m maximum.
- The level of the control signals can be switched over between positive (SOURCE) and negative (SINK) logic. The input signals are set to source logic when shipped from the factory. To change the control logic, the jumper connector above the control circuit terminal block must be moved to the other position.

---

## 4 PRECAUTIONS FOR USE OF THE INVERTER


---

The FR-D700 series is a highly reliable product, but incorrect peripheral circuit making or operation/handling method may shorten the product life or damage the product.

Before starting operation, always recheck the following items.

- Use crimping terminals with insulation sleeve to wire the power supply and motor.
- Application of power to the output terminals (U, V, W) of the inverter will damage the inverter. Never perform such wiring.
- After wiring, wire offcuts must not be left in the inverter.  
Wire offcuts can cause an alarm, failure or malfunction. Always keep the inverter clean. When drilling mounting holes in a control box etc., take care not to allow chips and other foreign matter to enter the inverter.
- Use cables of the size to make a voltage drop 2% maximum.  
If the wiring distance is long between the inverter and motor, a main circuit cable voltage drop will cause the motor torque to decrease especially at the output of a low frequency.  
Refer to *page 6* for the recommended cable size.
- The overall wiring length should be 500m maximum.  
Especially for long distance wiring, the fast-response current limit function may be reduced or the equipment connected to the inverter output side may malfunction or become faulty under the influence of a charging current due to the stray capacity of the wiring. Therefore, note the overall wiring length. (Refer to *page 6*)
- Electromagnetic Compatibility  
Operation of the frequency inverter can cause electromagnetic interference in the input and output that can be propagated by cable (via the power input lines), by wireless radiation to nearby equipment (e.g. AM radios) or via data and signal lines. Install an optional filter if present to reduce air propagated interference on the input side of the inverter. Use AC or DC reactors to reduce line propagated noise (harmonics). Use shielded motor power lines to reduce output noise.
- Do not install a power factor correction capacitor, varistor or arrester on the inverter output side. This will cause the inverter to trip or the capacitor, varistor, or arrester to be damaged. If any of the above devices is installed, immediately remove it.
- Before starting wiring or other work after the inverter is operated, wait for at least 10 minutes after the power supply has been switched off, and check that there are no residual voltage using a tester or the like. The capacitor is charged with high voltage for some time after power off and it is dangerous.
- A short circuit or earth fault on the inverter output side may damage the inverter modules.
  - Fully check the insulation resistance of the circuit prior to inverter operation since repeated short circuits caused by peripheral circuit inadequacy or an earth fault caused by wiring inadequacy or reduced motor insulation resistance may damage the inverter modules.
  - Fully check the to-earth insulation and inter-phase insulation of the inverter output side before power-on.  
Especially for an old motor or use in hostile atmosphere, securely check the motor insulation resistance etc.
- Do not use the inverter input side magnetic contactor to start/stop the inverter.  
Always use the start signal (ON/OFF of STF and STR signals) to start/stop the inverter.
- Across P/+ and PR terminals, connect only an external regenerative brake discharge resistor. Do not connect a mechanical brake.  
Also, never short between these terminals.

- Do not apply a voltage higher than the permissible voltage to the inverter I/O signal circuits.  
Application of a voltage higher than the permissible voltage to the inverter I/O signal circuits or opposite polarity may damage the I/O devices. Especially check the wiring to prevent the speed setting potentiometer from being connected incorrectly to short terminals 10-5.
- Provide electrical and mechanical interlocks for MC1 and MC2 which are used for bypass operation.  
When the wiring is incorrect or if there is a bypass circuit as shown below, the inverter will be damaged by leakage current from the power supply due to arcs generated at the time of switch-over or chattering caused by a sequence error.
- If the machine must not be restarted when power is restored after a power failure, provide a magnetic contactor in the inverter's input side and also make up a sequence which will not switch on the start signal.  
If the start signal (start switch) remains on after a power failure, the inverter will automatically restart as soon as the power is restored.
- Instructions for overload operation  
When performing operation of frequent start/stop of the inverter, increase/decrease in the temperature of the transistor element of the inverter may repeat due to a continuous flow of large current, shortening the life from thermal fatigue. Since thermal fatigue is related to the amount of current, the life can be increased by reducing bound current, starting current, etc. Decreasing current may increase the life. However, decreasing current will result in insufficient torque and the inverter may not start. Therefore, increase the inverter capacity to have enough allowance for current.
- Make sure that the specifications and rating match the system requirements.
- When the motor speed is unstable, due to change in the frequency setting signal caused by electromagnetic noises from the inverter, take the following measures when applying the motor speed by the analog signal.
  - Do not run the signal cables and power cables (inverter I/O cables) in parallel with each other and do not bundle them.
  - Run signal cables as far away as possible from power cables (inverter I/O cables).
  - Use shield cables as signal cables.
  - Install a ferrite core on the signal cable (Example: ZCAT3035-1330 TDK).

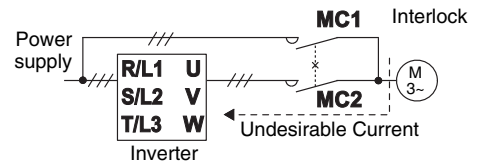

## 5 FAILSAFE OF THE SYSTEM WHICH USES THE INVERTER

When a fault occurs, the inverter trips to output a fault signal. However, a fault output signal may not be output at an inverter fault occurrence when the detection circuit or output circuit fails, etc. Although Mitsubishi assures best quality products, provide an interlock which uses inverter status output signals to prevent accidents such as damage to machine when the inverter fails for some reason and at the same time consider the system configuration where failsafe from outside the inverter, without using the inverter, is enabled even if the inverter fails.

### Interlock method which uses the inverter status output signals


By combining the inverter status output signals to provide an interlock as shown below, an inverter alarm can be detected.

| Interlock Method                       | Check Method   | Used Signals  | Refer to Page                                |
|--|--|---|--|
| Inverter protective function operation | Operation check of an alarm contact<br>Circuit error detection by negative logic | Fault output signal (ALM signal)  | Refer to chapter 4 of the Instruction Manual |
| Inverter running status                | Operation ready signal check   | Operation ready signal (RY signal)  |  |
|  | Logic check of the start signal and running signal                               | Start signal (STF signal, STR signal)<br>Running signal (RUN signal)                  |  |
|  | Logic check of the start signal and output current                               | Start signal (STF signal, STR signal)<br>Output current detection signal (Y12 signal) |  |

### Backup method outside the inverter

Even if the interlock is provided by the inverter status signal, enough failsafe is not ensured depending on the failure status of the inverter itself. For example, even if the interlock is provided using the inverter fault output signal, start signal and RUN signal output, there is a case where a fault output signal is not output and RUN signal is kept output even if an inverter fault occurs.

Provide a speed detector to detect the motor speed and current detector to detect the motor current and consider the backup system such as checking up as below according to the level of importance of the system. Check the motor running and motor current while the start signal is input to the inverter by comparing the start signal to the inverter and detected speed of the speed detector or detected current of the current detector. Note that the motor current runs as the motor is running for the period until the motor stops since the inverter starts decelerating even if the start signal turns off. For the logic check, configure a sequence considering the inverter deceleration time. In addition, it is recommended to check the three-phase current when using the current detector.

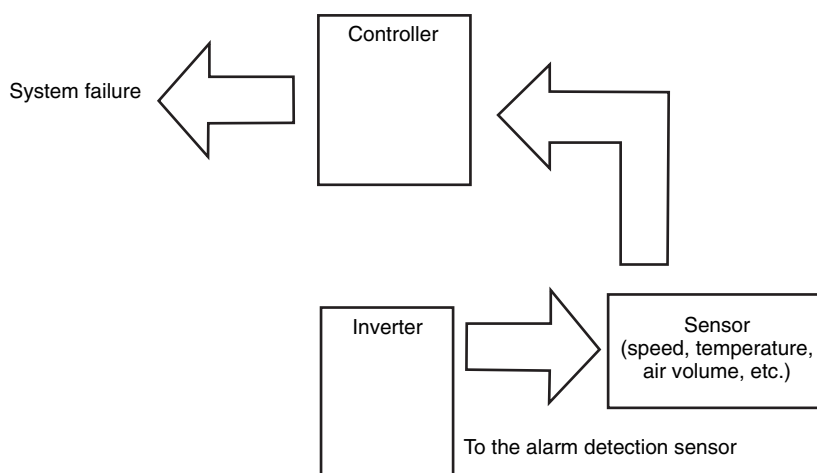

Check if there is no gap between the actual speed and commanded speed by comparing the inverter speed command and detected speed of the speed detector.



## 6 PARAMETER

For simple variable-speed operation of the inverter, the initial setting of the parameters may be used as they are. Set the necessary parameters to meet the load and operational specifications. Parameter setting, change and check can be made from the operation panel. For details of parameters, refer to the instruction manual.

In the initial setting, only the simple mode parameters are displayed.

Set *Pr. 160 Extended function display selection* as required.

| Parameter | Name                                | Initial Value | Setting Range | Remarks  |
|-----------|-------------------------------------|---------------|---------------|--|
| 160       | Extended function display selection | 9999          | 9999          | Only the simple mode parameters can be displayed.          |
|           |                                     |               | 0             | Simple mode and extended mode parameters can be displayed. |

### Remarks

- The parameters marked © are the simple mode parameters.
- The parameters marked with   in the table allow its setting to be changed during operation even if "0" (initial value) is set in *Pr. 77 Parameter write selection*.

| Parameters | Name   | Setting Range          | Initial Value                 |
|------------|--|------------------------|-------------------------------|
| © 0        | Torque boost                                   | 0 to 30%               | 6/4/3 *1                      |
| © 1        | Maximum frequency                              | 0 to 120Hz             | 120Hz                         |
| © 2        | Minimum frequency                              | 0 to 120Hz             | 0Hz                           |
| © 3        | Base frequency                                 | 0 to 400Hz             | 50Hz                          |
| © 4        | Multi-speed setting (high speed)               | 0 to 400Hz             | 50Hz                          |
| © 5        | Multi-speed setting (middle speed)             | 0 to 400Hz             | 30Hz                          |
| © 6        | Multi-speed setting (low speed)                | 0 to 400Hz             | 10Hz                          |
| © 7        | Acceleration time                              | 0 to 3600s             | 5s/10s *2                     |
| © 8        | Deceleration time                              | 0 to 3600s             | 5s/10s *2                     |
| © 9        | Electronic thermal O/L relay                   | 0 to 500A              | Rated inverter output current |
| 10         | DC injection brake operation frequency         | 0 to 120Hz             | 3Hz                           |
| 11         | DC injection brake operation time              | 0 to 10s               | 0.5s                          |
| 12         | DC injection brake operation voltage           | 0 to 30%               | 4%                            |
| 13         | Starting frequency                             | 0 to 60Hz              | 0.5Hz                         |
| 14         | Load pattern selection                         | 0 to 3                 | 0                             |
| 15         | Jog frequency                                  | 0 to 400Hz             | 5Hz                           |
| 16         | Jog acceleration/ deceleration time            | 0 to 3600s             | 0.5s                          |
| 17         | MRS input selection                            | 0, 2, 4                | 0                             |
| 18         | High speed maximum frequency                   | 120 to 400Hz           | 120Hz                         |
| 19         | Base frequency voltage                         | 0 to 1000V, 8888, 9999 | 8888                          |
| 20         | Acceleration/ deceleration reference frequency | 1 to 400Hz             | 50Hz                          |

| Parameters | Name   | Setting Range    | Initial Value |
|------------|--|------------------|---------------|
| 22         | Stall prevention operation level                                     | 0 to 200%        | 150%          |
| 23         | Stall prevention operation level compensation factor at double speed | 0 to 200%, 9999  | 9999          |
| 24 to 27   | Multi-speed setting 4 speed to 7 speed                               | 0 to 400Hz, 9999 | 9999          |
| 29         | Acceleration/ deceleration pattern selection                         | 0, 1, 2          | 0             |
| 30         | Regenerative function selection                                      | 0, 1, 2          | 0             |
| 31         | Frequency jump 1A  | 0 to 400Hz, 9999 | 9999          |
| 32         | Frequency jump 1B  | 0 to 400Hz, 9999 | 9999          |
| 33         | Frequency jump 2A  | 0 to 400Hz, 9999 | 9999          |
| 34         | Frequency jump 2B  | 0 to 400Hz, 9999 | 9999          |
| 35         | Frequency jump 3A  | 0 to 400Hz, 9999 | 9999          |
| 36         | Frequency jump 3B  | 0 to 400Hz, 9999 | 9999          |
| 37         | Speed display  | 0, 0.01 to 9998  | 0             |
| 40         | RUN key rotation direction selection                                 | 0, 1             | 0             |
| 41         | Up-to-frequency sensitivity  | 0 to 100%        | 10%           |
| 42         | Output frequency detection   | 0 to 400Hz       | 6Hz           |
| 43         | Output frequency detection for reverse rotation                      | 0 to 400Hz, 9999 | 9999          |
| 44         | Second acceleration/ deceleration time                               | 0 to 3600s       | 5s/10 *2      |

\*1 Differ according to capacities.

6%: FR-D740-022 or less

4%: FR-D740-036 to 080

3%: FR-D740-120 and 160

\*2 Differ according to capacities.

5s: FR-D740-080 or less

10s: FR-D740-120 and 160



| Parameters | Name  | Setting Range  | Initial Value                 |
|------------|---|--|-------------------------------|
| 45         | Second deceleration time                                    | 0 to 3600, 9999  | 9999                          |
| 46         | Second torque boost   | 0 to 30%, 9999   | 9999                          |
| 47         | Second V/F (base frequency)                                 | 0 to 400Hz, 9999   | 9999                          |
| 48         | Second stall prevention operation current                   | 0 to 200%, 9999  | 9999                          |
| 51         | Second electronic thermal O/L relay                         | 0 to 500A, 9999  | 9999                          |
| 52         | DU/PU main display data selection                           | 0, 5, 8 to 12, 14, 20, 23 to 25, 52 to 55, 61, 62, 64, 100 | 0                             |
| 55         | Frequency monitoring reference                              | 0 to 400Hz   | 50Hz                          |
| 56         | Current monitoring reference                                | 0 to 500A  | Rated inverter output current |
| 57         | Restart coasting time                                       | 0, 0.1 to 5s, 9999   | 9999                          |
| 58         | Restart cushion time  | 0 to 60s   | 1s                            |
| 59         | Remote function selection                                   | 0, 1, 2, 3   | 0                             |
| 60         | Energy saving control selection                             | 0, 9   | 0                             |
| 65         | Retry selection   | 0 to 5   | 0                             |
| 66         | Stall prevention operation reduction starting frequency     | 0 to 400Hz   | 50Hz                          |
| 67         | Number of retries at alarm occurrence                       | 0 to 10, 101 to 110  | 0                             |
| 68         | Retry waiting time  | 0.1 to 600s  | 1s                            |
| 69         | Retry count display erase                                   | 0  | 0                             |
| 70         | Special regenerative brake duty                             | 0 to 30%   | 0%                            |
| 71         | Applied motor   | 0, 1, 3, 13, 23, 40, 43, 50, 53                            | 0                             |
| 72         | PWM frequency selection                                     | 0 to 15  | 1                             |
| 73         | Analog input selection                                      | 0, 1, 10, 11   | 1                             |
| 74         | Input filter time constant                                  | 0 to 8   | 1                             |
| 75         | Reset selection/disconnected PU detection/PU stop selection | 0 to 3, 14 to 17   | 14                            |
| 77         | Parameter write selection                                   | 0, 1, 2  | 0                             |
| 78         | Reverse rotation prevention selection                       | 0, 1, 2  | 0                             |
| © 79       | Operation mode selection                                    | 0, 1, 2, 3, 4, 6, 7  | 0                             |
| 80         | Motor capacity  | 0.1 to 7.5kW, 9999   | 9999                          |
| 82         | Motor excitation current                                    | 0 to 500A, 9999  | 9999                          |
| 83         | Motor rated voltage   | 0 to 1000V   | 400V                          |

| Parameters | Name  | Setting Range          | Initial Value |
|------------|---|------------------------|---------------|
| 84         | Rated motor frequency                             | 10 to 120 Hz           | 50Hz          |
| 90         | Motor constant (R1)                               | 0 to 50Ω, 9999         | 9999          |
| 96         | Auto tuning setting status                        | 0, 11, 21              | 0             |
| 117        | PU communication station number                   | 0 to 31 (0 to 247)     | 0             |
| 118        | PU communication speed                            | 48, 96, 192, 384       | 192           |
| 119        | PU communication stop bit length                  | 0, 1, 10, 11           | 1             |
| 120        | PU communication parity check                     | 0, 1, 2                | 2             |
| 121        | Number of PU communication retries                | 0 to 10, 9999          | 1             |
| 122        | PU communication check time interval              | 0, 0.1 to 999.8s, 9999 | 0             |
| 123        | PU communication waiting time setting             | 0 to 150ms, 9999       | 9999          |
| 124        | PU communication CR/LF presence/absence selection | 0, 1, 2                | 1             |
| © 125      | Terminal 2 frequency setting gain frequency       | 0 to 400Hz             | 50Hz          |
| © 126      | Terminal 4 frequency setting gain frequency       | 0 to 400Hz             | 50Hz          |
| 127        | PID control automatic switchover frequency        | 0 to 400Hz, 9999       | 9999          |
| 128        | PID action selection                              | 0, 20, 21, 40 to 43    | 0             |
| 129        | PID proportional band                             | 0.1 to 1000%, 9999     | 100%          |
| 130        | PID integral time                                 | 0.1 to 3600s, 9999     | 1s            |
| 131        | PID upper limit                                   | 0 to 100%, 9999        | 9999          |
| 132        | PID lower limit                                   | 0 to 100%, 9999        | 9999          |
| 133        | PID action set point                              | 0 to 100%, 9999        | 9999          |
| 134        | PID differential time                             | 0.01 to 10.00s, 9999   | 9999          |
| 145        | PU display language selection                     | 0 to 7                 | 1             |
| 146        | Parameter for manufacturer setting. Do not set.   |                        |               |
| 150        | Output current detection level                    | 0 to 200%              | 150%          |
| 151        | Output current detection signal delay time        | 0 to 10s               | 0s            |
| 152        | Zero current detection level                      | 0 to 200%              | 5%            |
| 153        | Zero current detection time                       | 0 to 1s                | 0.5s          |
| 156        | Stall prevention operation selection              | 0 to 31, 100, 101      | 0             |
| 157        | OL signal output timer                            | 0 to 25s, 9999         | 0s            |

| Parameters | Name  | Setting Range   | Initial Value |
|------------|---|---|---------------|
| 158        | AM terminal function selection                                | 1 to 3, 5, 8 to 12, 14, 21, 24, 52, 53, 61, 62  | 1             |
| ©160       | Extended function display selection                           | 0, 9999   | 9999          |
| 161        | Frequency setting/ key lock operation selection               | 0, 1, 10, 11  | 0             |
| 162        | Automatic restart after instantaneous power failure selection | 0, 1, 10, 11  | 1             |
| 165        | Stall prevention operation level for restart                  | 0 to 200%   | 150%          |
| 166        | Output current detection signal retention time                | 0 to 10s, 9999  | 0.1s          |
| 167        | Output current detection operation selection                  | 0, 1  | 0             |
| 168        | Parameter for manufacturer setting. Do not set.               |   |               |
| 169        |   |   |               |
| 170        | Watt-hour meter clear   | 0, 10, 9999   | 9999          |
| 171        | Operation hour meter clear                                    | 0, 9999   | 9999          |
| 178        | STF terminal function selection                               | 0 to 5, 7, 8, 10, 12, 14, 16, 18, 24, 25, 37, 60, 62, 65 to 67, 9999  | 60            |
| 179        | STR terminal function selection                               | 0 to 5, 7, 8, 10, 12, 14, 16, 18, 24, 25, 37, 61, 62, 65 to 67, 9999  | 61            |
| 180        | RL terminal function selection                                | 0 to 5, 7, 8, 10, 12, 14, 16, 18, 24, 25, 37, 62, 65 to 67, 9999  | 0             |
| 181        | RM terminal function selection                                |   | 1             |
| 182        | RH terminal function selection                                |   | 2             |
| 190        | RUN terminal function selection                               | 0, 1, 3, 4, 7, 8, 11 to 16, 25, 26, 46, 47, 64, 70, 90, 91, 93, 95, 96, 98, 99, 100, 101, 103, 104, 107, 108, 111 to 116, 125, 126, 146, 147, 164, 170, 190, 191, 193, 195, 196, 198, 199, 9999 | 0             |
| 192        | ABC terminal function selection                               | 0, 1, 3, 4, 7, 8, 11 to 16, 25, 26, 46, 47, 64, 70, 90, 91, 95, 96, 98, 99, 100, 101, 103, 104, 107, 108, 111 to 116, 125, 126, 146, 147, 164, 170, 190, 191, 195, 196, 198, 199, 9999          | 99            |
| 232 to 239 | Multi-speed setting (speeds 8 to 15)                          | 0 to 400Hz, 9999  | 9999          |
| 240        | Soft-PWM operation selection                                  | 0, 1  | 1             |

| Parameters | Name   | Setting Range                        | Initial Value |
|------------|--|--------------------------------------|---------------|
| 241        | Analog input display unit switchover                     | 0, 1                                 | 0             |
| 244        | Cooling fan operation selection                          | 0, 1                                 | 1             |
| 245        | Rated slip   | 0 to 50%, 9999                       | 9999          |
| 246        | Slip compensation time constant                          | 0.01 to 10s                          | 0.5s          |
| 247        | Constant-power range slip compensation selection         | 0, 9999                              | 9999          |
| 249        | Earth (ground) fault detection at start                  | 0, 1                                 | 0             |
| 250        | Stop selection   | 0 to 100s, 1000 to 1100s, 8888, 9999 | 9999          |
| 251        | Output phase loss protection selection                   | 0, 1                                 | 1             |
| 255        | Life alarm status display                                | (0 to 15)                            | 0             |
| 256        | Inrush current suppression circuit life display          | (0 to 100%)                          | 100%          |
| 257        | Control circuit capacitor life display                   | (0 to 100%)                          | 100%          |
| 258        | Main circuit capacitor life display                      | (0 to 100%)                          | 100%          |
| 259        | Main circuit capacitor life measuring                    | 0, 1 (2, 3, 8, 9)                    | 0             |
| 260        | PWM frequency automatic switchover                       | 0, 1                                 | 0             |
| 261        | Power failure stop selection                             | 0, 1, 2                              | 0             |
| 267        | Terminal 4 input selection                               | 0, 1, 2                              | 0             |
| 268        | Monitor decimal digits selection                         | 0, 1, 9999                           | 9999          |
| 269        | Parameter for manufacturer setting. Do not make setting. |                                      |               |
| 295        | Magnitude of frequency change setting                    | 0, 0.01, 0.10, 1.00, 10.00           | 0             |
| 296        | Password lock level                                      | 1 to 6, 101 to 106, 9999             | 9999          |
| 297        | Password lock/unlock                                     | 1000 to 9998 (0 to 5, 9999)          | 9999          |
| 298        | Frequency search gain                                    | 0 to 32767, 9999                     | 9999          |
| 299        | Rotation direction detection selection at restarting     | 0, 1, 9999                           | 0             |
| 338        | Communication operation command source                   | 0, 1                                 | 0             |
| 339        | Communication speed command source                       | 0, 1, 2                              | 0             |
| 340        | Communication startup mode selection                     | 0, 1, 10                             | 0             |
| 342        | Communication EEPROM write selection                     | 0, 1                                 | 0             |
| 343        | Communication error count                                | —                                    | 0             |



| Parameters | Name  | Setting Range      | Initial Value          |
|------------|---|--------------------|------------------------|
| 450        | Second applied motor  | 0, 1, 9999         | 9999                   |
| 495        | Remote output selection                                       | 0, 1, 10, 11       | 0                      |
| 496        | Remote output data 1  | 0 to 4095          | 0                      |
| 502        | Stop mode selection at communication error                    | 0, 1, 2            | 0                      |
| 503        | Maintenance timer   | 0 (1 to 9998)      | 0                      |
| 504        | Maintenance timer alarm output set time                       | 0 to 9998, 9999    | 9999                   |
| 549        | Protocol selection  | 0, 1               | 0                      |
| 551        | PU mode operation command source selection                    | 2, 4, 9999         | 2                      |
| 555        | Current average time  | 0.1 to 1s          | 1s                     |
| 556        | Data output mask time   | 0.0 to 20s         | 0s                     |
| 557        | Current average value monitor signal output reference current | 0 to 500A          | Rated inverter current |
| 561        | PTC thermistor protection level                               | 0.5 to 30Ω, 9999   | 9999                   |
| 563        | Energization time carrying-over times                         | (0 to 65535)       | 0                      |
| 564        | Operating time carrying-over times                            | (0 to 65535)       | 0                      |
| 571        | Holding time at a start                                       | 0.0 to 10.0s, 9999 | 9999                   |
| 575        | Output interruption detection time                            | 0 to 3600s, 9999   | 1s                     |
| 576        | Output interruption detection level                           | 0 to 400Hz         | 0Hz                    |
| 577        | Output interruption cancel level                              | 900 to 1100%       | 1000%                  |
| 592        | Traverse function selection                                   | 0, 1, 2            | 0                      |
| 593        | Maximum amplitude amount                                      | 0 to 25%           | 10%                    |
| 594        | Amplitude compensation amount during deceleration             | 0 to 50%           | 10%                    |
| 595        | Amplitude compensation amount during acceleration             | 0 to 50%           | 10%                    |
| 596        | Amplitude acceleration time                                   | 0.1 to 3600s       | 5s                     |
| 597        | Amplitude deceleration time                                   | 0.1 to 3600s       | 5s                     |
| 611        | Acceleration time at a restart                                | 0 to 3600s, 9999   | 9999                   |
| 653        | Speed smoothing control                                       | 0 to 200%          | 0                      |
| 665        | Regeneration avoidance frequency gain                         | 0 to 200%          | 100                    |
| 872        | Input phase loss protection selection                         | 0, 1               | 1                      |

| Parameters              | Name  | Setting Range   | Initial Value |
|-------------------------|---|-----------------|---------------|
| 882                     | Regeneration avoidance operation selection                | 0, 1, 2         | 0             |
| 883                     | Regeneration avoidance operation level                    | 300 to 800V     | 760VDC        |
| 885                     | Regeneration avoidance compensation frequency limit value | 0 to 10Hz, 9999 | 6Hz           |
| 886                     | Regeneration avoidance voltage gain                       | 0 to 200%       | 100%          |
| 888                     | Free parameter 1  | 0 to 9999       | 9999          |
| 889                     | Free parameter 2  | 0 to 9999       | 9999          |
| 891                     | Cumulative power monitor digit shifted times              | 0 to 4, 9999    | 9999          |
| C1 (901) <sup>*1</sup>  | AM terminal calibration                                   | —               | —             |
| C2 (902) <sup>*1</sup>  | Terminal 2 frequency setting bias frequency               | 0 to 400Hz      | 0Hz           |
| C3 (902) <sup>*1</sup>  | Terminal 2 frequency setting bias                         | 0 to 300%       | 0%            |
| 125 (903) <sup>*1</sup> | Terminal 2 frequency setting gain frequency               | 0 to 400Hz      | 50Hz          |
| C4 (903) <sup>*1</sup>  | Terminal 2 frequency setting gain                         | 0 to 300%       | 100%          |
| C5 (904) <sup>*1</sup>  | Terminal 4 frequency setting bias frequency               | 0 to 400Hz      | 0Hz           |
| C6 (904) <sup>*1</sup>  | Terminal 4 frequency setting bias                         | 0 to 300%       | 20%           |
| 126 (905) <sup>*1</sup> | Terminal 4 frequency setting gain frequency               | 0 to 400Hz      | 50Hz          |
| C7 (905) <sup>*1</sup>  | Terminal 4 frequency setting gain                         | 0 to 300%       | 100%          |
| C22 (922) <sup>*1</sup> | Parameter for manufacturer setting. Do not set.           |                 |               |
| C23 (922) <sup>*1</sup> |   |                 |               |
| C24 (923) <sup>*1</sup> |   |                 |               |
| C25 (923) <sup>*1</sup> |   |                 |               |
| 990                     | PU buzzer control   | 0, 1            | 1             |
| 991                     | PU contrast adjustment                                    | 0 to 63         | 58            |
| Pr.CL                   | Parameter clear   | 0, 1            | 0             |
| ALLC                    | All parameter clear                                       | 0, 1            | 0             |
| Er.CL                   | Alarm history clear                                       | 0, 1            | 0             |
| Pr.CH                   | Initial value change list                                 | —               | —             |

<sup>\*1</sup> The parameter number in parentheses is the one for use with the operation panel (FR-PA02-02) for the FR-E500 series or parameter unit (FR-PU04/FR-PU07).

---

## 7 TROUBLESHOOTING

---

When an fault occurs in the inverter, the protective function is activated bringing the inverter to an alarm stop and the PU display automatically changes to any of the following fault (alarm) indications.

If your fault does not correspond to any of the following faults or if you have any other problem, please contact your sales representative.

- Retention of fault output signal ..... When the magnetic contactor (MC) provided on the input side of the inverter is opened at the activation of the protective function, the inverter's control power will be lost and the alarm output will not be held.
- Fault or alarm display ..... When a fault or alarm occurs, the operation panel display automatically switches to the fault or alarm indication.
- Resetting method ..... When a protective function of the inverter is activated, the power output of the inverter is blocked (motor is coasting). The inverter cannot start up again unless an automatic restart has been configured or the inverter is reset. Please observe carefully the warnings contained below in the configuration of an automatic restart or the execution of a reset.
- If protective functions were activated (i. e. the inverter switched off with an error message) follow the instructions for error correction provided in the manual for the inverter. Especially in the case of short circuits or earth contacts in the inverter output and mains overvoltages the cause of the fault must be determined prior to switching on again as a recurrence of such faults at short intervals can lead to premature aging of components or even the complete breakdown of the device. After the cause of the fault has been found and corrected the inverter can be reset and operations continue.

Inverter fault or alarm indications are roughly divided as below.

- Error Message  
A message regarding operational fault and setting fault by the operation panel and parameter unit (FR-PU04/FR-PU07) is displayed. The inverter does not shut off output.
- Warnings  
The inverter does not shut off output even when a warning is displayed. However, failure to take appropriate measures will lead to a major fault.
- Alarm  
The inverter does not shut off output. You can also output an alarm signal by making parameter setting.
- Fault  
When the protective function is activated, the inverter output is shut off and an fault signal is output.

### 7.1 Reset method of protective function


---

#### Resetting the inverter


The inverter can be reset by performing any of the following operations. Note that the internal thermal integrated value of the electronic thermal relay function and the number of retries are cleared (erased) by resetting the inverter. Recover about 1s after reset is cancelled.

Three different methods can be used to reset an inverter.


- Using the operation panel, press the STOP/RESET key to reset the inverter.  
(This may only be performed when a fault occurs.)

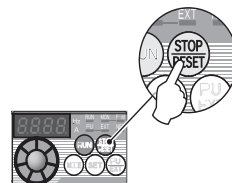

- Switch power off once, then switch it on again.

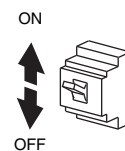

- Turn on the reset signal (RES) for more than 0.1s. (If the RES signal is kept on, "Err." appears (flickers) to indicate that the inverter is in a reset status.)

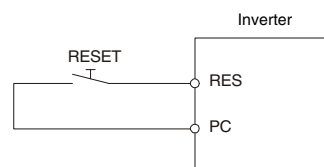



## 7.2 List of alarm display

| Operation Panel Indication |                          | Meaning  |
|----------------------------|--------------------------|--|
| Error messages             | <i>E---</i>              | E --- Faults history   |
|                            | <i>HOLD</i>              | HOLD Operation panel lock  |
|                            | <i>Er1</i> to <i>Er4</i> | Er1 to 4 Parameter write error                                       |
|                            | <i>Err.</i>              | Err. Inverter reset  |
|                            | <i>LOCd</i>              | LOCd Password locked   |
| Warnings                   | <i>OL</i>                | OL Stall Prevention (overcurrent)                                    |
|                            | <i>oL</i>                | oL Stall prevention (overvoltage)                                    |
|                            | <i>rb</i>                | RB Regenerative brake prealarm                                       |
|                            | <i>TH</i>                | TH Electronic thermal relay function prealarm                        |
|                            | <i>PS</i>                | PS PU Stop   |
|                            | <i>MT</i>                | MT Maintenance signal output   |
|                            | <i>UV</i>                | UV Undervoltage  |
| Alarm                      | <i>Fn</i>                | FN Fan alarm   |
| Fault                      | <i>E.OC1</i>             | E.OC1 Overcurrent shut-off during acceleration                       |
|                            | <i>E.OC2</i>             | E.OC2 Overcurrent shut-off during constant speed                     |
|                            | <i>E.OC3</i>             | E.OC3 Overcurrent shut-off during deceleration or stop               |
|                            | <i>E.OV1</i>             | E.OV1 Regenerative overvoltage shut-off during acceleration          |
|                            | <i>E.OV2</i>             | E.OV2 Regenerative overvoltage shut-off during constant speed        |
|                            | <i>E.OV3</i>             | E.OV3 Regenerative overvoltage shut-off during deceleration or stop  |
|                            | <i>E.THT</i>             | E.THT Inverter overload shut-off (electronic thermal relay function) |
|                            | <i>E.THM</i>             | E.THM Motor overload shut-off (electronic thermal relay function)    |
|                            | <i>E.FIn</i>             | E.FIN Fin overheat   |

| Operation Panel Indication |        | Meaning   |
|----------------------------|--------|---|
| <i>E.ILF</i>               | E.ILF* | Input phase loss  |
| <i>E.OLT</i>               | E.OLT  | Stall prevention  |
| <i>E. bE</i>               | E.BE   | Brake transistor alarm detection                        |
| <i>E. GF</i>               | E.GF   | Output side earth (ground) fault overcurrent protection |
| <i>E. LF</i>               | E.LF   | Output phase loss                                       |
| <i>E.OHT</i>               | E.OHT  | External thermal relay operation                        |
| <i>E.PTC</i>               | E.PTC* | PTC thermistor operation                                |
| <i>E. PE</i>               | E.PE   | Parameter storage device fault                          |
| <i>E.PUE</i>               | E.PUE  | PU disconnection  |
| <i>E.rEr</i>               | E.RET  | Retry count excess                                      |
| <i>E.CPU</i>               | E.CPU  | CPU fault   |
| <i>E.CdO</i>               | E.CDO* | Output current detection value exceeded                 |
| <i>E.IOH</i>               | E.IOH* | Inrush current limit circuit fault                      |
| <i>E.AIE</i>               | E.AIE* | Analog input fault                                      |

\* If an E.ILF, E.PE2, E.IOH, E.SER, E.AIE or E.USB fault occurs when using the FR-PU04, "Fault 14" is displayed on the FR-PU04.

---

# A APPENDIX

---

## A.1 Instructions for Compliance with the European Directives

---

### A.1.1 EMC Directive

- Our view of transistorized inverters for the EMC Directive  
A transistorized inverter is a component designed for installation in an enclosure and for use with the other equipment to control the equipment/device. Therefore, we understand that the EMC Directive does not apply directly to transistorized inverters. For this reason, we do not place the CE mark on the transistorized inverters. (The CE mark is placed on inverters in accordance with the Low Voltage Directive.) CEMEP
- Compliance  
We understand that the general-purpose inverters are not covered directly by the EMC Directive. However, the EMC Directive applies to machines/equipment into which inverters have been incorporated, and these machines and equipment must carry the CE marks. EMC Installation Guidelines BCN-A21041-202
- Outline of installation method  
Install an inverter using the following methods:
  - Use the inverter with an European Standard-compliant noise filter.
  - For wiring between the inverter and motor, use shielded cables or run them in a metal piping and ground the cables on the inverter and motor sides with the shortest possible distance.
  - Insert a line noise filter and ferrite core into the power and control lines as required.Full information including the European Standard-compliant noise filter specifications are written in the technical information "EMC Installation Guidelines" (BCN-A21041-202). Please contact your sales representative.

### A.1.2 Low Voltage Directive


We have self-confirmed our inverters as products compliant to the Low Voltage Directive (Conforming standard EN 50178) and placed the CE mark on the inverters.

#### Outline of instructions


- Do not use a residual current operated protective device (RCD) as an electric shock protector without connecting the equipment to the earth. Connect the equipment to the earth securely.
- Wire the earth terminal independently. (Do not connect two or more cables to one terminal.)
- Use the cable sizes on *page 6* under the following conditions.
  - Ambient temperature: 40°C maximumIf conditions are different from above, select appropriate wire according to EN60204 ANNEX C TABLE 5.
- When tightening the screw, be careful not to damage the threads.  
For use as a product compliant with the Low Voltage Directive, use PVC cable whose size is indicated on *page 6*.
- Use the moulded case circuit breaker and magnetic contactor which conform to the EN or IEC Standard.
- When using an earth leakage current breaker, use a residual current operated protective device (RCD) of type B (breaker which can detect both AC and DC.) If not, provide double or reinforced insulation between the inverter and other equipment, or put a transformer between the main power and inverter.
- Use the residual current operated protective device (RCD) of type B (breaker which can detect both AC and DC). However, be aware that also AC/DC sensitive earth leakage circuit breakers can be activated when turning the main power on and off and that this behaviour can be improved through the use of AC/DC sensitive earth leakage circuit breakers with adapted triggering curve designed for the inverter. If not, provide double or reinforced insulation between the inverter and other equipment, or put a transformer between the main power supply and inverter.
- Use the inverter under the conditions of overvoltage category II (usable regardless of the earth (ground) condition of the power supply), overvoltage category III (usable with the earthed-neutral system power supply, 400V class only) specified in IEC664.
- To use the inverter under the conditions of pollution degree 3, install it in the enclosure of IP54 or higher.



- To use the inverter (IP20) outside of an enclosure in the environment of pollution degree 2, fix a fan cover with the fan cover fixing screws enclosed.

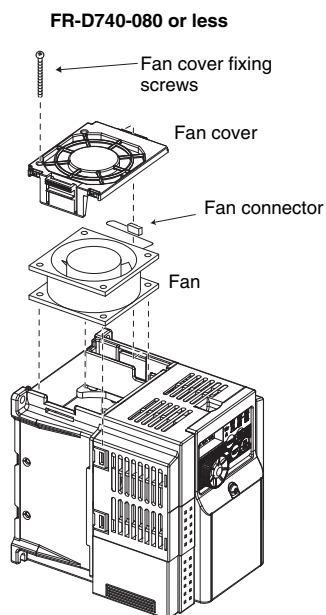

Example for FR-D740-036

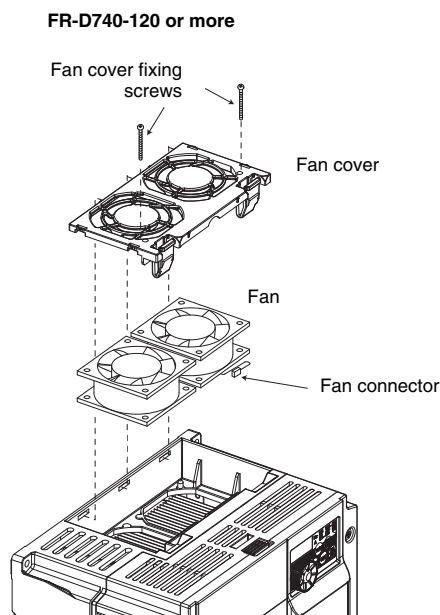

Example for FR-D740-160

- On the input and output of the inverter, use cables of the type and size set forth in EN60204 Appendix C.
- The operating capacity of the relay outputs (terminal symbols A, B, C) should be 30VDC, 0.3A. (Relay outputs are basically isolated from the inverter internal circuit.)
- Control circuit terminals on page 4 are safely isolated from the main circuit.

#### Environment

|                     | During Operation              | In Storage     | During Transportation |
|---------------------|-------------------------------|----------------|-----------------------|
| Ambient temperature | -10°C to +50°C (non-freezing) | -20°C to +65°C | -20°C to +65°C        |
| Ambient humidity    | 90% RH or less                | 90% RH or less | 90% RH or less        |
| Maximum altitude    | 1000m                         | 1000m          | 10000m                |



## A.2 Instructions for UL and cUL

(UL 508C, CSA C22.2 No.14)

### A.2.1 General precaution

The bus capacitor discharge time is 10 minutes. Before starting wiring or inspection, switch power off, wait for more than 10 minutes, and check for residual voltage between terminal P/+ and N/- with a meter etc., to avoid a hazard of electrical shock.

### A.2.2 Installation

The below types of inverter have been approved as products for use in enclosure and approval tests were conducted under the following conditions.

Design an enclosure so that the inverter ambient temperature, humidity and atmosphere satisfy the specifications. (Refer to *page 2*.)

#### Wiring protection

For installation in the United States, branch circuit protection must be provided in accordance with the National Electrical Code and any applicable provincial codes.

For installation in Canada, branch circuit protection must be provided in accordance with the Canada Electrical Code and any applicable provincial codes.

Provide the appropriate UL and cUL listed class T type fuse that are suitable for branch circuit protection in accordance with the table below.

| FR-D740-□□□-EC (C)                  |  | 012          | 022 | 036 | 050 | 080 | 120 | 160 |
|-------------------------------------|--|--------------|-----|-----|-----|-----|-----|-----|
| Rated voltage [V]                   |  | 480V or more |     |     |     |     |     |     |
| Fuse maximum allowable rating [A] * | Without power factor improving reactor | 6            | 10  | 15  | 20  | 30  | 40  | 70  |
|                                     | With power factor improving reactor    | 6            | 10  | 10  | 15  | 25  | 35  | 60  |

\* Maximum allowable rating by US National Electrical Code. Exact size must be chosen for each installation.

### A.2.3 Short circuit ratings

- 400V class

Suitable For Use in A Circuit Capable of Delivering Not More Than 100kA rms Symmetrical Amperes, 528V Maximum.

### A.2.4 Wiring


- The cables used should be 75°C copper cables.
- Tighten the terminal screws to the specified torques.  
Undertightening can cause a short or misoperation.  
Overtightening can cause the screws and unit to be damaged, resulting in a short or misoperation.
- Use the UL approved round crimping terminals. Crimp the terminals with the crimping tool recommended by the terminal manufacturer.



## A.2.5 Motor overload protection

When using the electronic thermal relay as motor overload protection, set the rated motor current to *Pr. 9 Electronic thermal O/L relay*.

### Electronic thermal relay function characteristic

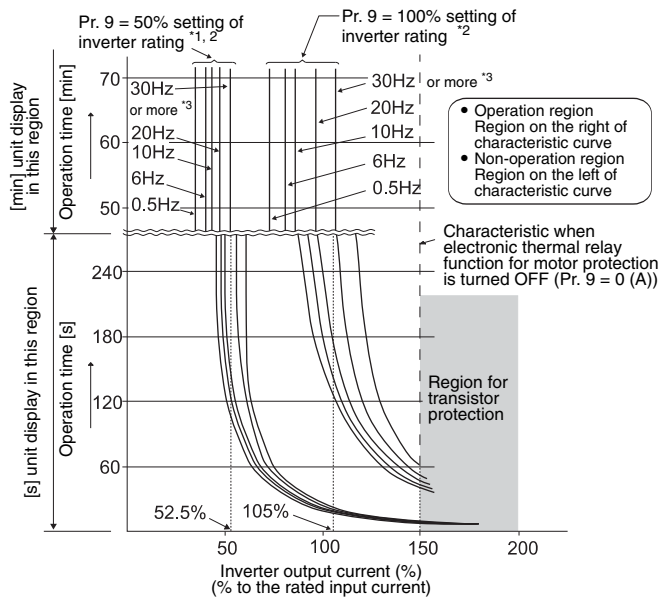

This function detects the overload (overheat) of the motor, stops the operation of the inverter's output transistor, and stops the output.

When using the Mitsubishi constant-torque motor set "1" or any of "13", "23", "50", "53" in Pr. 71. This provides a 100% continuous torque characteristic in the low-speed range. Set the rated current of the motor in Pr. 9.

<sup>\*1</sup> When a value 50% of the inverter rated output current (current value) is set in Pr. 9.

<sup>\*2</sup> The % value denotes the percentage to the inverter rated output current. It is not the percentage to the motor rated current.

<sup>\*3</sup> When you set the electronic thermal relay function dedicated to the Mitsubishi constant-torque motor, this characteristic curve applies to operation at 6Hz or higher.

### CAUTION

- Protective function by electronic thermal relay function is reset by inverter power reset and reset signal input. Avoid unnecessary reset and power-off.
- When multiple motors are operated by a single inverter, protection cannot be provided by the electronic thermal relay function. Install an external thermal relay to each motor.
- When the difference between the inverter and motor capacities is large and the setting is small, the protective characteristics of the electronic thermal relay function will be deteriorated. In this case, use an external thermal relay.
- A special motor cannot be protected by the electronic thermal relay function. Use a external thermal relay.

## About the CD ROM

- The copyright and other rights of this enclosed CD ROM all belong to Mitsubishi Electric Corporation.
- No part of this CD ROM may be copied or reproduced without the permission of Mitsubishi Electric Corporation.
- Specifications of this CD ROM are subject to change without notice.
- We are not responsible for any damages and lost earnings, etc. from use of this CD ROM.
- Microsoft, Windows, Microsoft Windows NT are registered trademarks of Microsoft Corporation in the United States and/or other countries. Adobe and Acrobat are registered trademarks of Adobe Systems Incorporated. Pentium is a registered trademark of Intel Corporation of the United States and/or other countries. Mac OS is a registered trademark of Apple Computer, Inc., U.S.A. PowerPC is a registered trademark of International Business Machines Corporation. Other company and product names herein are the trademarks and registered trademarks of their respective owners.

- Warranty
  - We do not provide a warranty against defects in this CD ROM and related documents.
  - We are not responsible to any loss resulting from use of this product.

### Acrobat Reader

For use of Acrobat Reader contained in this CD ROM, please follow use conditions established by Adobe System Incorporated.

## WARNING

- This is a personal computer dedicated CD ROM. Do not attempt to play it on ordinary audio devices. The loud volume may damage hearing and speakers.

## When playing the CD ROM on Windows OS

### Operating environment

The following system is required to read instruction manuals contained in this CD ROM:

| Item         | Specifications   |
|--------------|--|
| OS           | Microsoft Windows 95 OSR 2.0, Windows 98 Second Edition, Windows Millennium Edition, Windows NT 4.0 with Service Pack 6, Windows 2000 with Service Pack 2, Windows XP Professional or Home Edition, Windows XP Tablet PC Edition |
| CPU          | Intel Pentium processor  |
| Memory       | 64MB of RAM  |
| Hard disk    | 24MB of available hard disk space  |
| CD ROM drive | Double speed or more (more than quadruple speed is recommended)  |
| Monitor      | 800×600 dot or more  |
| Application  | Acrobat Reader 4.05 or more (This CD ROM contains Acrobat Reader 5.0. Install Acrobat Reader contained in the CD ROM or download Acrobat Reader from the internet)   |

### Operating method of this CD ROM:

- Acrobat Reader 5.0 installation procedure
  - ① Start Windows and place this CD ROM in the CD ROM drive.
  - ② If Acrobat Reader is not installed in your computer, an installation screen of Acrobat Reader is automatically displayed.
  - ③ Install according to the instruction of installation screen of Acrobat Reader.

#### Manual installation

- ① Start Windows and place this CD ROM in the CD ROM drive.
- ② Select a CD ROM drive (example: D drive) of "My computer" and click the right mouse button. Then, click "open" in the context menu.
- ③ Open "WINDOWS" folder in "ACROBAT" folder in the opened folder and execute AR505ENU.EXE.
- ④ Install according to the instruction of installation screen of Acrobat Reader.

#### How to read instruction manual

- ① Start Windows and place this CD ROM in the CD ROM drive.
- ② "700 series documentation" PDF automatically opens.
- ③ Click a PDF file name of the manual you want to read in the "INSTRUCTION MANUAL" list.
- ④ PDF manual you clicked opens.

#### Manual opening of this CD ROM

- ① Start Windows and place this CD ROM in the CD ROM drive.
- ② Select a CD ROM drive (example: D drive) of "My computer" and click the right mouse button. Then, click "open" in the context menu.
- ③ Open "INDEX.PDF" in the opened folder
- ④ "700 series documentation" PDF opens. Operates according to the steps from Step ③ of "How to read instruction manual"

## When playing this CD ROM on Macintosh OS

| Item         | Specifications   |
|--------------|--|
| OS           | Mac OS 8.6, 9.0.4, 9.1, or Mac OS X* (* Some features may not be available.)   |
| CPU          | PowerPC processor  |
| Memory       | 64MB of RAM  |
| Hard disk    | 24MB of available hard disk space  |
| CD ROM drive | Double speed or more (more than quadruple speed is recommended)  |
| Monitor      | 800×600 dot or more  |
| Application  | Acrobat Reader 4.05 or more (This CD ROM contains Acrobat Reader 5.0. Install Acrobat Reader contained in the CD ROM or download Acrobat Reader from the internet) |

- Operating method of this CD ROM
  - ① Start Macintosh and place this CD ROM in the CD ROM drive.
  - ② Double click on the CD ROM icon on the desk top to open the CD ROM.
  - ③ Open "MacOS" folder in "ACROBAT" folder in the opened folder and execute Acrobat Reader Installer.
  - ④ Install according to the instruction of installation screen of Acrobat Reader.
- How to read instruction manuals
  - ① Start Macintosh and place this CD ROM in the CD ROM drive.
  - ② Double click on the CD ROM icon on the desk top to open the CD ROM.
  - ③ Open "INDEX.PDF" in the opened folder
  - ④ "700 series documentation" PDF opens.
  - ⑤ Click a PDF file name of the manual you want to read in the "INSTRUCTION MANUAL" list.
  - ⑥ PDF manual you clicked opens.

| HEADQUARTERS   |                       |
|--|-----------------------|
| MITSUBISHI ELECTRIC EUROPE B.V.<br>German Branch<br>Gothaer Straße 8<br><b>D-40880 Ratingen</b><br>Phone: +49 (0)2102 / 486-0<br>Fax: +49 (0)2102 / 486-1120                               | <b>EUROPE</b>         |
| MITSUBISHI ELECTRIC EUROPE B.V.<br>French Branch<br>25, Boulevard des Bouvets<br><b>F-92741 Nanterre Cedex</b><br>Phone: +33 (0)1 / 55 68 55 68<br>Fax: +33 (0)1 / 55 68 57 57             | <b>FRANCE</b>         |
| MITSUBISHI ELECTRIC EUROPE B.V.<br>Irish Branch<br>Westgate Business Park, Ballymount<br><b>IRL-Dublin 24</b><br>Phone: +353 (0)1 4198800<br>Fax: +353 (0)1 4198890                        | <b>IRELAND</b>        |
| MITSUBISHI ELECTRIC EUROPE B.V.<br>Italian Branch<br>Viale Collei 7<br><b>I-20041 Agrate Brianza (MI)</b><br>Phone: +39 039 / 60 53 1<br>Fax: +39 039 / 60 53 312                          | <b>ITALY</b>          |
| MITSUBISHI ELECTRIC CORPORATION<br>Office Tower "Z" 14 F<br><b>8-12, 1 chome, Harumi Chuo-Ku</b><br>Tokyo 104-6212<br>Phone: +81 3 622 160 60<br>Fax: +81 3 622 160 75                     | <b>JAPAN</b>          |
| MITSUBISHI ELECTRIC EUROPE B.V.<br>UK Branch<br>Travellers Lane<br><b>UK-Hatfield, Herts. AL10 8XB</b><br>Phone: +44 (0)1707 / 27 61 00<br>Fax: +44 (0)1707 / 27 86 95                     | <b>UK</b>             |
| MITSUBISHI ELECTRIC EUROPE B.V.<br>Spanish Branch<br>Carretera de Rubí 76-80<br><b>E-08190 Sant Cugat del Vallés (Barcelona)</b><br>Phone: +34 93 / 565 3131<br>Fax: +34 93 / 589 1579     | <b>SPAIN</b>          |
| MITSUBISHI ELECTRIC AUTOMATION<br>500 Corporate Woods Parkway<br><b>Vernon Hills, IL 60061</b><br>Phone: +1 847 478 21 00<br>Fax: +1 847 478 22 83   | <b>USA</b>            |
| EUROPEAN REPRESENTATIVES   |                       |
| GEVA<br>Wiener Straße 89<br><b>AT-2500 Baden</b><br>Phone: +43 (0)2252 / 85 55 20<br>Fax: +43 (0)2252 / 488 60   | <b>AUSTRIA</b>        |
| TEHNIKON<br>Oktyabrskaya 16/5, Off. 703-711<br><b>BY-220030 Minsk</b><br>Phone: +375 (0)17 / 210 46 26<br>Fax: +375 (0)17 / 210 46 26  | <b>BELARUS</b>        |
| Koning & Hartman B.V.<br>Industrial Solutions<br>Woluwelaan 31<br><b>BE-1800 Vilvoorde</b><br>Phone: +32 (0)2 / 257 02 40<br>Fax: +32 (0)2 / 257 02 49                                     | <b>BELGIUM</b>        |
| AKHNATON<br>4 Andrej Ljapchev Blvd. Pb 21<br><b>BG-1756 Sofia</b><br>Phone: +359 (0)2 / 97 44 05 8<br>Fax: +359 (0)2 / 97 44 06 1  | <b>BULGARIA</b>       |
| INEA CR d.o.o.<br>Losinjska 4 a<br><b>HR-10000 Zagreb</b><br>Phone: +385 (0)1 / 36 940 - 01 / -02 / -03<br>Fax: +385 (0)1 / 36 940 - 03  | <b>CROATIA</b>        |
| AutoCont Control Systems, s.r.o.<br>Jelinkova 59/3<br><b>CZ-721 00 Ostrava Svinov</b><br>Phone: +420 (0)59 / 5691 150<br>Fax: +420 (0)59 / 5691 199  | <b>CZECH REPUBLIC</b> |
| AutoCont Control Systems, s.r.o.<br>Technologická 374/6<br><b>CZ-708 00 Ostrava - Pustkovec</b><br>Phone: +420 595 691 150<br>Fax: +420 595 691 199  | <b>CZECH REPUBLIC</b> |
| B:TECH, a.s.<br>Na Ostrove 84<br><b>CZ - 58001 Havlickuv Brod</b><br>Phone: +420 (0)569 / 408 841<br>Fax: +420 (0)569 / 408 889  | <b>CZECH REPUBLIC</b> |
| B:TECH, a.s.<br>Headoffice<br>U Borové 69<br><b>CZ-580 01 Havlickuv Brod</b><br>Phone: +420 569 777 777<br>Fax: +420 569 777 778   | <b>CZECH REPUBLIC</b> |
| Beijer Electronics A/S<br>Lautrupvej 1-3<br><b>DK-2750 Ballerup</b><br>Phone: +45 (0)70 / 26 46 46<br>Fax: +45 (0)70 / 26 48 48  | <b>DENMARK</b>        |
| Beijer Electronics Eesti OÜ<br>Pärnu mnt.160i<br><b>EE-11317 Tallinn</b><br>Phone: +372 (0)6 / 51 81 40<br>Fax: +372 (0)6 / 51 81 49   | <b>ESTONIA</b>        |
| Beijer Electronics OY<br>Jaakonkatu 2<br><b>FIN-01620 Vantaa</b><br>Phone: +358 (0)207 / 463 500<br>Fax: +358 (0)207 / 463 501   | <b>FINLAND</b>        |
| UTECO A.B.E.E.<br>5, Mavrogenous Str.<br><b>GR-18542 Piraeus</b><br>Phone: +30 211 / 1206 900<br>Fax: +30 211 / 1206 999   | <b>GREECE</b>         |
| MELTRADE Ltd.<br>Fertő utca 14.<br><b>HU-1107 Budapest</b><br>Phone: +36 (0)1 / 431-9726<br>Fax: +36 (0)1 / 431-9727   | <b>HUNGARY</b>        |
| Beijer Electronics SIA<br>Vestienas iela 2<br><b>LV-1035 Riga</b><br>Phone: +371 (0)784 / 2280<br>Fax: +371 (0)784 / 2281  | <b>LATVIA</b>         |
| Beijer Electronics UAB<br>Savanoriu Pr. 187<br><b>LT-02300 Vilnius</b><br>Phone: +370 (0)5 / 232 3101<br>Fax: +370 (0)5 / 232 2980   | <b>LITHUANIA</b>      |
| INTEHSIS srl<br>bld. Traian 23/1<br><b>MD-2060 Kishinev</b><br>Phone: +373 (0)22 / 66 4242<br>Fax: +373 (0)22 / 66 4280  | <b>MOLDOVA</b>        |
| Koning & Hartman B.V.<br>Haarlerbergweg 21-23<br><b>NL-1101 CH Amsterdam</b><br>Phone: +31 (0)20 / 587 76 00<br>Fax: +31 (0)20 / 587 76 05   | <b>NETHERLANDS</b>    |
| Beijer Electronics AS<br>Postboks 487<br><b>NO-3002 Drammen</b><br>Phone: +47 (0)32 / 24 30 00<br>Fax: +47 (0)32 / 84 85 77  | <b>NORWAY</b>         |
| MPL Technology Sp. z o.o.<br>Ul. Krakowska 50<br><b>PL-32-083 Balice</b><br>Phone: +48 (0)12 / 630 47 00<br>Fax: +48 (0)12 / 630 47 01   | <b>POLAND</b>         |
| SIRIUS TRADING & SERVICES SRL<br>Aleea Lacul Morii Nr. 3<br><b>RO-060841 Bucuresti, Sector 6</b><br>Phone: +40 (0)21 / 430 40 06<br>Fax: +40 (0)21 / 430 40 02                             | <b>ROMANIA</b>        |
| CRAFT Consulting & Engineering d.o.o.<br>Bulevar Svetog Cara Konstantina 80-86<br><b>SER-18106 Nis</b><br>Phone: +381 (0)18 / 292-24-4/5, 523 962<br>Fax: +381 (0)18 / 292-24-4/5, 523 962 | <b>SERBIA</b>         |
| INEA SR d.o.o.<br>Karadjordjeva 12/260<br><b>SER-113000 Smederevo</b><br>Phone: +381 (0)26 / 617 163<br>Fax: +381 (0)26 / 617 163  | <b>SERBIA</b>         |
| CS MTrade Slovensko, s.r.o.<br>Vajanskeho 58<br><b>SK - 92101 Piestany</b><br>Phone: +421 (0)33 / 7742 760<br>Fax: +421 (0)33 / 7735 144   | <b>SLOVAKIA</b>       |
| INEA d.o.o.<br>Stegne 11<br><b>SI-1000 Ljubljana</b><br>Phone: +386 (0)1 / 513 8100<br>Fax: +386 (0)1 / 513 8170   | <b>SLOVENIA</b>       |
| Beijer Electronics Automation AB<br>Box 426<br><b>SE-20124 Malmö</b><br>Phone: +46 (0)40 / 35 86 00<br>Fax: +46 (0)40 / 35 86 02   | <b>SWEDEN</b>         |
| ECONOTEC AG<br>Hinterdorfstr. 12<br><b>CH-8309 Nürensdorf</b><br>Phone: +41 (0)44 / 838 48 11<br>Fax: +41 (0)44 / 838 48 12  | <b>SWITZERLAND</b>    |
| GTS<br>Darulaceze Cad. No. 43 KAT. 2<br><b>TR-34384 Okmeydani-Istanbul</b><br>Phone: +90 (0)212 / 320 1640<br>Fax: +90 (0)212 / 320 1649   | <b>TURKEY</b>         |
| CSC Automation Ltd.<br>15, M. Raskova St., Fl. 10, Office 1010<br><b>UA-02002 Kiev</b><br>Phone: +380 (0)44 / 494 33 55<br>Fax: +380 (0)44 / 494-33-66                                     | <b>UKRAINE</b>        |
| EURASIAN REPRESENTATIVES   |                       |
| Kazpromautomatiks Ltd.<br>2, Scladskaya str.<br><b>KAZ-470046 Karaganda</b><br>Phone: +7 3212 / 50 11 50<br>Fax: +7 3212 / 50 11 50  | <b>KAZAKHSTAN</b>     |
| CONSYS<br>Promyshlennaya st. 42<br><b>RU-198099 St. Petersburg</b><br>Phone: +7 812 / 325 36 53<br>Fax: +7 812 / 325 36 53   | <b>RUSSIA</b>         |
| Electrotechnical Systems Siberia<br>Derbenevskaya st. 11A, Office 69<br><b>RU-115114 Moscow</b><br>Phone: +7 495 / 744 55 54<br>Fax: +7 495 / 744 55 54                                    | <b>RUSSIA</b>         |
| ELEKTROSTILY<br>Rubzovskaya nab. 4-3, No. 8<br><b>RU-105082 Moscow</b><br>Phone: +7 495 / 545 3419<br>Fax: +7 495 / 545 3419   | <b>RUSSIA</b>         |
| RPS-AUTOMATIKA<br>Budennovskiy 97, Office 311<br><b>RU-344007 Rostov on Don</b><br>Phone: +7 8632 / 22 63 72<br>Fax: +7 8632 / 219 45 51   | <b>RUSSIA</b>         |
| STC DRIVE TECHNIQUE<br>Poslannikov per. 9, str 1<br><b>RU-105005 Moscow</b><br>Phone: +7 495 / 790 72 10<br>Fax: +7 495 / 790 72 12  | <b>RUSSIA</b>         |
| MIDDLE EAST REPRESENTATIVE   |                       |
| Sherf Motion Techn. Ltd.<br>Rehov Hamerkava 19<br><b>IL-58851 Holon</b><br>Phone: +972 (0)3 / 559 54 62<br>Fax: +972 (0)3 / 556 01 82  | <b>ISRAEL</b>         |
| AFRICAN REPRESENTATIVE   |                       |
| CBI Ltd.<br>Private Bag 2016<br><b>ZA-1600 Isando</b><br>Phone: +27 (0)11 / 928 2000<br>Fax: +27 (0)11 / 392 2354  | <b>SOUTH AFRICA</b>   |